



The correct way to separate the flange cover is to rotate and pull upward. Never pull straight apart.